

MAINTENANCE AND WARRANTIES

BB01 GRIZZLY TOWER
BB02 MIGHTY TOWER
BB03 FOUR WAY TOWER
BB04 HIGH FIVE SEAT
BB05 PARK LIGHT

Outdoor Basketball Equipment receive heavy use that are subject to players slam dunking, hanging off the hoop, climbing on the equipment, wind loads, fatigue loading, coastal conditions and vandalism in unsupervised outdoor environments.

Periodic inspections must be carried out to ensure public safety.

It is the responsibility of the owner to maintain a program of routine inspections and maintenance as per the Parklife Terms and Conditions and ensure maintenance is site and use specific.

Parklife recommend a check of the equipment be conducted once a month and an annual inspection by a qualified Structural Engineer to ensure the highest level of product performance.

Parklife are to be contacted immediately if any issues are detected. Any repairs must be authorized by Parklife and replacement parts must be supplied by Parklife. Not doing so voids the warranty and may result in serious injury or death. The following is a guideline only.

INSTALLATION

Ensure the equipment was installed as per Parklife's installation drawings.

MONTHLY CHECK

Carry out a check (including but not limited to):

Welds - check for signs of rust and/or fatigue cracks (alert Parklife immediately if any found)

Coatings (HDG, Paint and/or Powdercoating) - check for signs of rust and/or compromising of

Bolts, washers and nuts - check all present and torqued

Net - check it is present and note the condition of it

Warning Sticker - check it is present and note the condition of it

Vegetation - ensure existing vegetation is maintained a minimum of 2m from the equipment

New trees - ensure new tree plantings are further than 4m of the equipment

Vehicles (including maintenance mowers) - ensure they are kept a minimum of 2m from the equipment

Pesticides and Herbicides - ensure they are kept well clear of the equipment.

ANNUAL INSPECTION

Carry out an inspection by a qualified Structural Engineer (including but not limited to):

Welds - inspect for signs of rust and/or fatigue cracks

Coatings (HDG, Paint and/or Powdercoating) - inspect for signs of rust and/or compromising of

Bolts, washers and nuts - check all present and torqued

Court – inspect for cracking of concrete/asphalt around the equipment base that may allow water to penetrate down into the footing

Footing (if not captured in the court) - inspect for movement of

Weld Testing - carry out if recommended by the Structural Engineer.

GRAFITTI

Parklife to be contacted should the equipment be graffitied so they can best advise the right strategy to remove.

CONTACTS

Supplier

Parklife
0295 348 859
info@parklife.co.nz
www.parklife.co.nz

Structural Engineers

ACH Consulting Engineers (Design Certifiers)
09 839 7050
info@achconsulting.co.nz
www.achconsulting.co.nz

Weld Testing

Materials and Testing Laboratories
09 579 0262
sales@mtlabs.co.nz
www.mtlabs.co.nz

WARRANTIES

5 years on all parts - excludes net

2 years on Park Light LED Light Unit.

The warranty only applies to correctly maintained products. It does not cover any damage caused by accident, improper care, negligence, normal wear and tear, cosmetic issues, dunking and hanging off the hoop/ring, vandalism and repairs carried out by any third party not approved by Parklife.

Any alterations to the product or third-party parts replacements that do not comply with the certified engineered design will void the warranty. To ensure public safety, any repairs need to be carried out by Parklife or a Parklife approved repair agent using Parklife supplied parts.